




# Airdog X8 Cleaning

## 1. CLEANING THE PRE-FILTERS

1. Unplug the Airdog.
2. Remove the cover, pulling it from the bottom.
3. To remove the pre-filter pull the the two tabs at the top.
4. Place pre-filter on flat surface, hover/brush the dust off.
5. Hover the inside of the pre-filter area.
6. Repeat these steps on the opposite side.

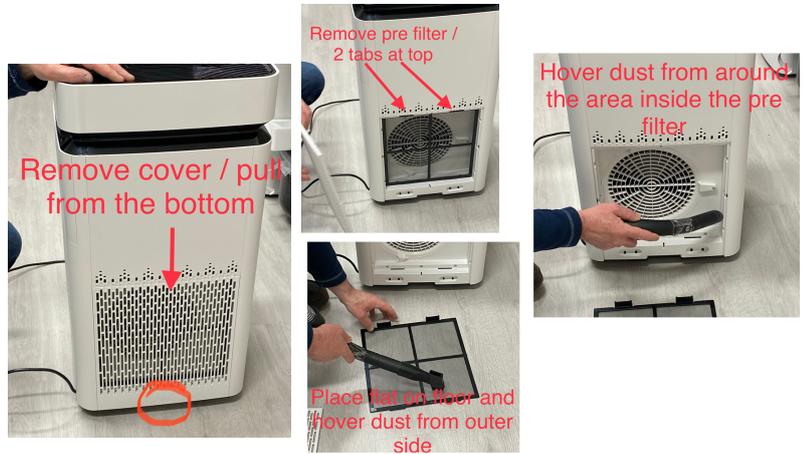

## 2. WASHING THE COLLECTING PLATES

1. Place your fingers in the groove on the back panel and pull towards you.
2. Remove the collecting plates.
3. Place one hand underneath the collecting plates to avoid damage.
4. Use a soft bristle brush, warm water and a mild cleaning agent to thoroughly clean..



## 3. DRYING

1. Collecting plates must be fully dried before being reinstalled in unit.
2. Place collecting plates in an airy place or on top of a radiator and allow to dry for 8 to 12 hours (overnight).
3. When completely dry, reinstall



Surgically Clean Air always!!